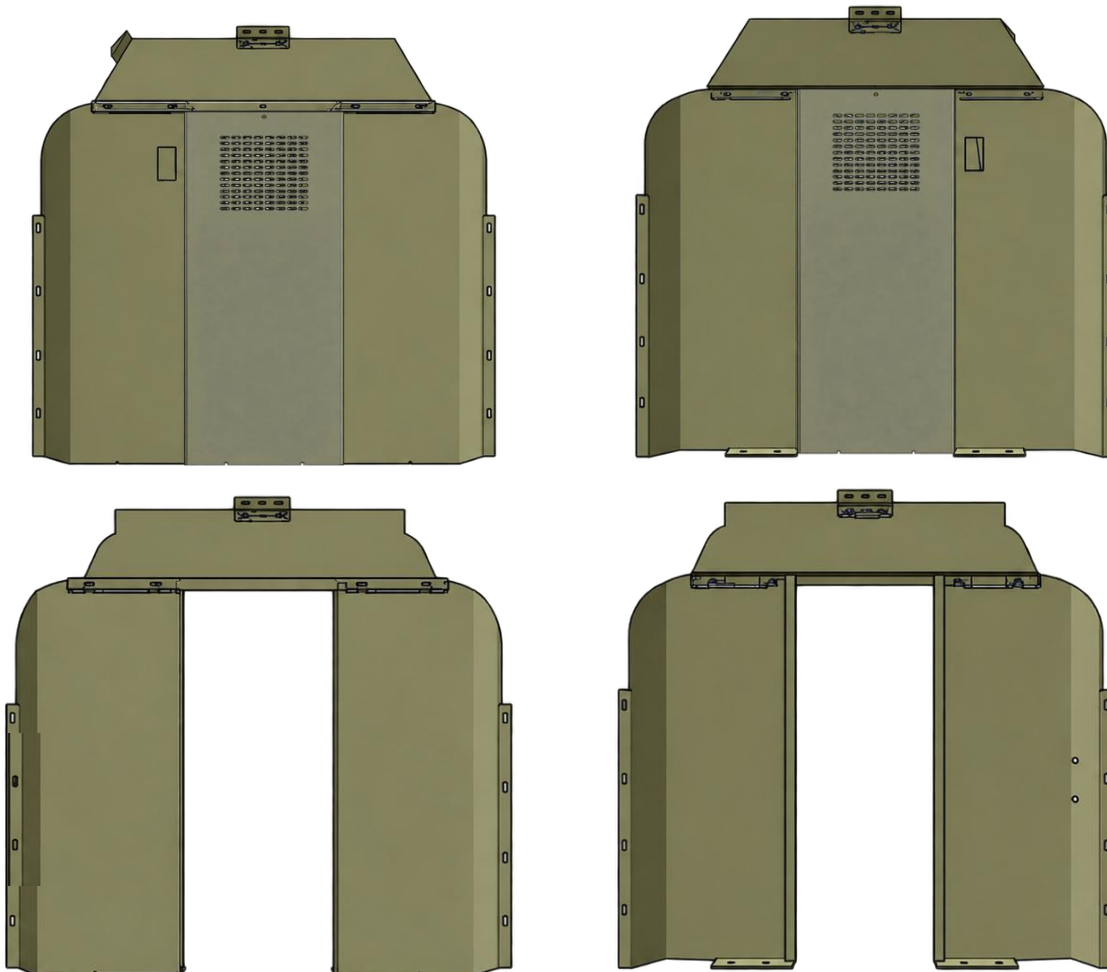


# PARTITION INSTALLATION INSTRUCTION



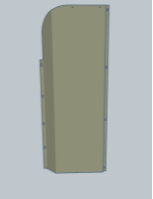
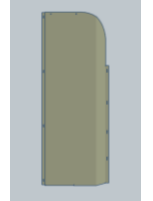
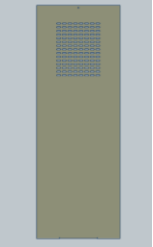
Installation Instructions for Partition Wall  
Version: 0.0

## Table of Contents

---

- Materials List – 3
  - Assembly Instructions – 5
  - Installation Instructions – 8
- 

## Materials List

| Part Number     | Description                      | Image                                                                                 |
|-----------------|----------------------------------|---------------------------------------------------------------------------------------|
| 50018           | 5/16-18 Nylon Lock Nuts          |    |
| 50017           | (5/16 - 18) x 5/8" Hex Head Bolt |    |
| .375 SAE WASHER | 3/8" SAE Washer "Plated" KBN     |                                                                                       |
| 50048           | (5/16-18) x 1.5" Hex Head Bolt   |    |
|                 | 5/16 Rivet Nut                   |                                                                                       |
| 5147-5          | Top Panel                        |  |
| 5147-2          | Left Side Panel                  |  |
| 5147-3          | Right Side Panel                 |  |
| 5147-4          | Middle Panel                     |  |

---

## Installation Instructions

---

### 1. Install Left Side Panel

- i. Using **5/8" hex head Bolts, SAE washers, and nylon lock nuts** attach the left side panel to the wall of the van through the holes along the left side for the panel.



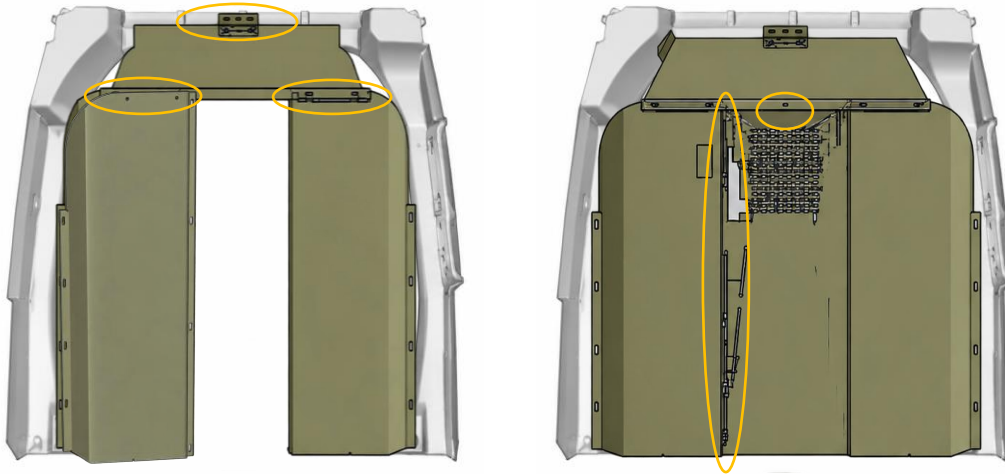
## 2. Install Right Door Panel

- i. Repeat **Step 1** on the van's right wall using the right-side panel.



## 3. Install Top Piece & Middle Panel (If needed)

- i. Using **5/8" hex head Bolts, SAE washers, and nylon lock nuts** attach the top panel to the top of the van and the top of each side panel.
- ii. Using **5/8" hex head Bolts, SAE washers, and nylon lock nuts** attach the middle panel to the top panel from inside the body of the van.
- iii. Secure the middle panel to the side panel from inside the cab of the van.



#### 4. Secure Partition to the Floor

**IMPORTANT:** Always check underneath the van before drilling to avoid drilling through any critical components.

**EV WARNING:** Avoid drilling into EV floors to prevent battery damage. Use an approved track system or other manufacturer-approved mounting method for safe installation.

- i. Using the designated holes on the bottom of each side panel from the cab of the van, install **5/16" rivet nuts** into the van floor using a **rivet nut gun**.
- ii. Secure the shelf to the installed rivet nuts using a **(5/16 - 18) x 5/8" hex head bolt and 3/8" SAE washer**.

